


# Wall Installation

# xPRESS Audio Keypad


Quickstart Guide




Download the **iPort Connect iOS App** to set up your Audio Keypad.

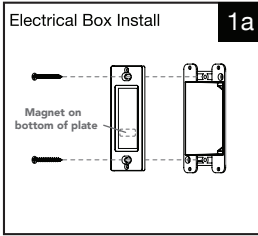


Screw the wall plate adapter to the wallbox with the provided screws. Be sure the magnet is on the bottom.

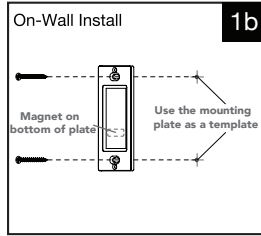


Mark the holes using the wall plate adapter and use the screws provided to screw the wall plate adapter to the wall. No other anchors are required.

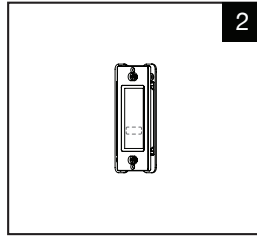


Be sure the wall plate adapter is level and tightened.

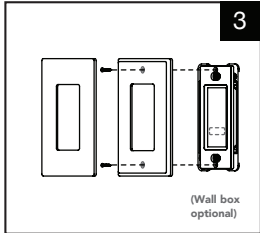


Use any Decora compatible wall plate (sold separately). Screw the wall plate base on with the trim screws provided with the wall plate.

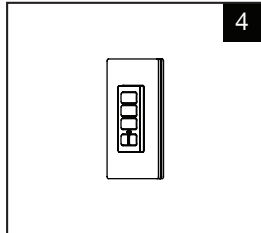

Snap the wall plate cover on and attach the xPRESS Audio Keypad. The keypad magnetically attaches to the wall plate adapter and can be removed at any time.  
**NOTE: If keypad does not magnetically attract, check the orientation of the wall plate adapter.**

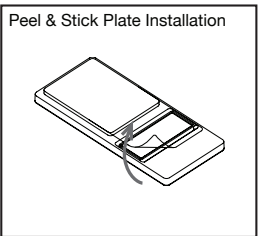

Peel plastic to reveal the adhesive strip. Stick onto a wall or furniture. The keypad magnetically attaches to the wall plate adapter and can be removed at any time.

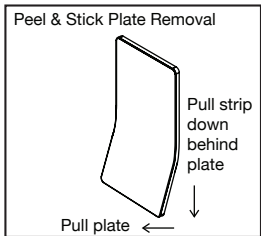

To remove the peel and stick plate, pry up the bottom and pull/stretch the adhesive strip downward.

**NOTE:** The plate is designed to bend and break when removing from the wall.

Designed and engineered in the USA.  
Assembled in the USA.

Warranty, **Terms and Conditions** at [iportproducts.com](http://iportproducts.com)

iPort  
212 Avenida Fabricante  
San Clemente, CA 92672 USA

+1.949.226.5222  
[iportproducts.com](http://iportproducts.com)

iPort is a trademark of Dana Innovations, registered in the U.S. and other countries.  
Copyright 2017, all rights reserved.  
Sonos is a trademark of Sonos Inc., registered in the U.S. and other countries. Copyright 2016, all rights reserved.  
Decora is a trademark of Leviton.




**CAUTION:** Only use this product as directed. Do not dismantle product. Unspecified use could result in injury.




**CAUTION:** This product contains magnets. Do not place in direct proximity with magnetically sensitive objects such as credit cards or exposed hard drives. Persons with pace makers are not recommended to use this product.

## Box Contents

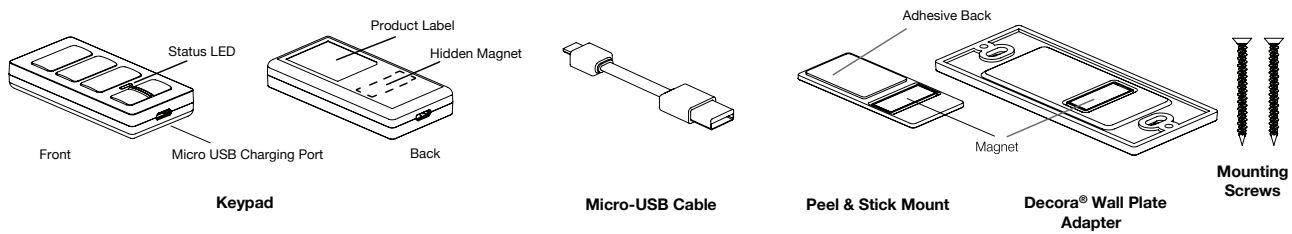

## Quick Start

### 1 Charge Your Keypad

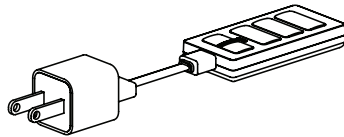

To charge, connect the USB A connector on the supplied USB cable to any 5v USB power adapter like a smart phone charger. Connect the micro-USB end to your Keypad. Charging can take up to 3 hours. When the red LED on the Keypad turns green, charging is complete.

### 2 Download the iPort Connect App



To configure your Keypad to work with your Sonos devices, download the iPort Connect App from the App Store and follow the steps within the App. Requires an iPhone, iPad or iPod touch with iOS 10 or later.

### 3 Configure Your Keypad with Sonos Using the iPort Connect App

Instructions are included in the iPort Connect App. including firmware update.

## Keypad LED Color & Blink Quick Reference

**Blue** - Configuration Mode

**White** - Device Functioning on the network

**Yellow** - Fail State, could mean several things:

1. Failed connection to the network
2. Failed connection to Sonos device
3. Sonos does not currently allow this function
4. During firmware update, battery is not sufficiently charged

**Blinking Red** - Low Battery

**Solid Red** - Battery is charging

**Solid Green** - Battery is fully charged

**Purple** - Firmware Update mode, goes away when firmware update is complete

## Keypad Button Press Quick Reference

Function	Button Press	Action
Keypad Force-Reboot (in any mode)	Track Forward	Press and Hold for 6 Seconds
Update Keypad Firmware	Play/Pause & Volume Down	Press and Hold both for 10 Seconds
Enters Keypad into Configuration Mode	Volume Up and Down	Press and Hold both for 6 Seconds
Wake Up Keypad for 2 Minutes (Talk to iPort Connect App)	Play/Pause	Press and Hold for 6 Seconds

### 4 Choose a Great Place to Install on the Wall (see reverse side for wall installation)